
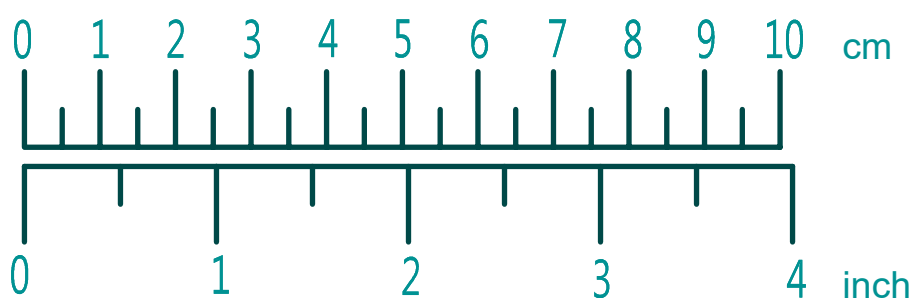


Measuring Tool

Please print this page first then follow the installation instructions of page 2.

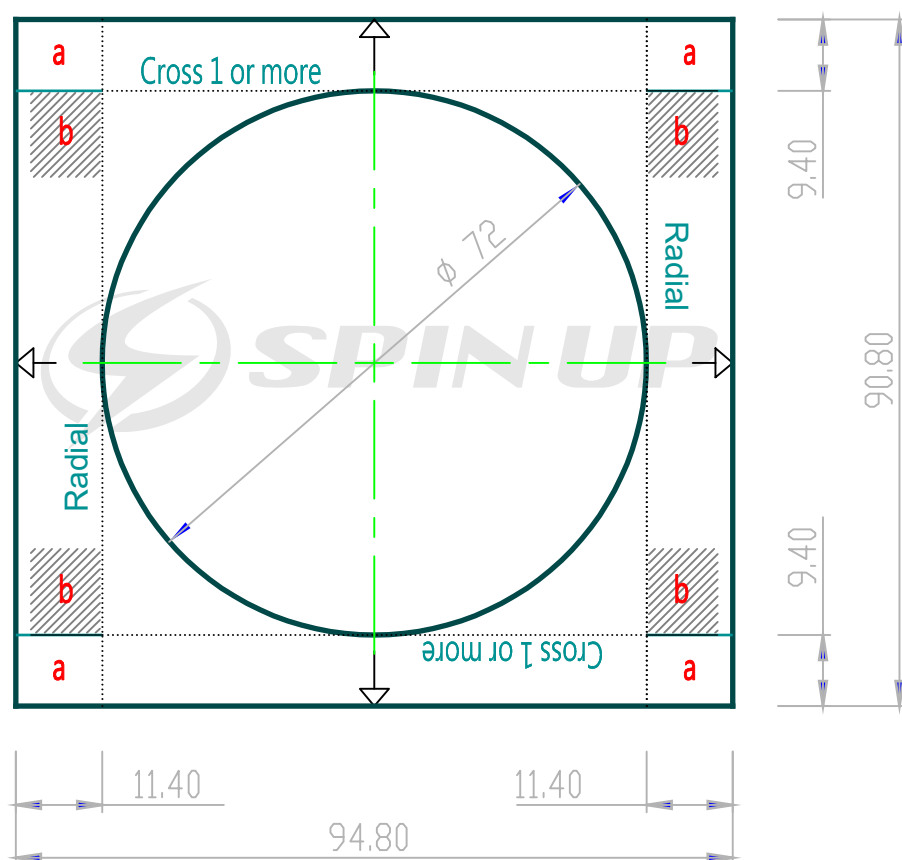


Installation Instructions

Using this Measuring tool you can know if your bicycle can be equipped with the F12W-PRO. Please follow the steps below.

請按照以下步驟，來確認您的自行車安裝空間：

1. Please make sure that the scale on the printed paper is the same as the actual ruler.







請確認印出來的比例尺和實際的尺是一樣比例

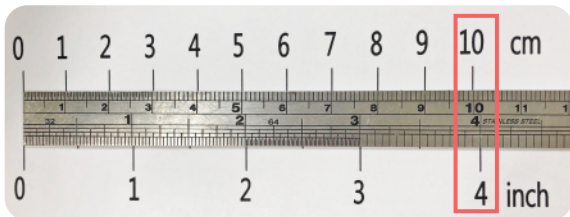

2. Cut the solid line of "Measuring Tool", then fold the dotted line.

And Glue all "a" and all "b" together.

請凹折 "Measuring Tool" 上的虛線，並且沿著實線切割; 再將 a 面和 b 面黏合

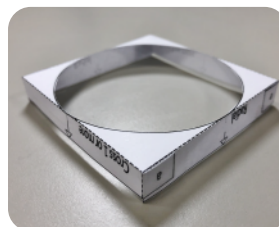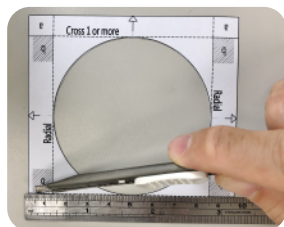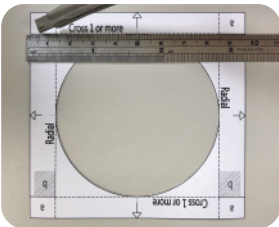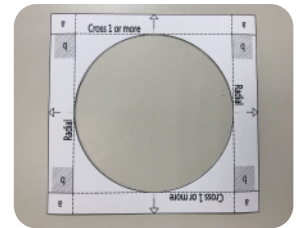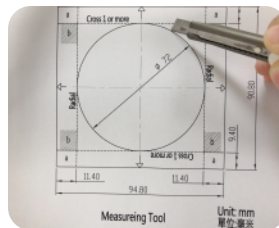
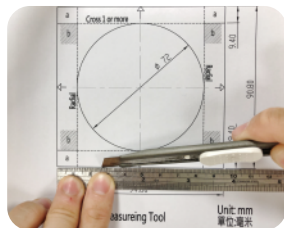


3. Remove your front wheel, and place it horizontally.

拆下前輪並水平放置在平坦的位置



4. Place the center of the "Measuring Tool" in the center of your wheel hub.
Stick the "Measuring Tool" horizontally to the hub with tape.
將 "Measuring Tool" 的中心放置在花鼓中心，並用膠帶水平黏貼於花鼓

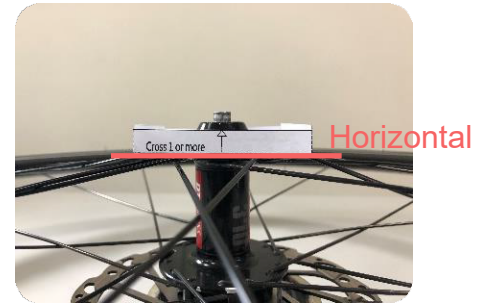
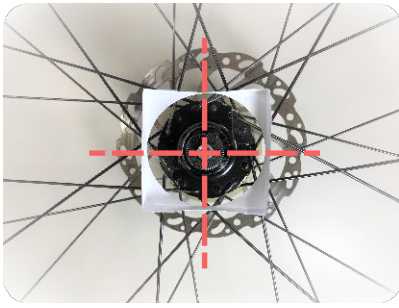


5. Put the front wheel back into the fork.
將前輪裝回前叉
6. Rotate the wheel and check all 4 faces of the measuring tool are perpendicular to the fork. Make sure that each face of the measuring tool does not touch the fork when it is perpendicular to the fork. (If your wheel is radial spoked, please check with the face of "Radial". If not, please check with the face of "Cross 1 or more".)
旋轉車輪，確定檢查工具的 4 個面皆能夠垂直於前叉。確認檢查工具的每個面垂直於前叉時沒有觸碰到前叉。(幅條屬於沒有交叉的，請使用 Radial 的面來檢查；幅條屬於有交叉的，請使用 Cross 1 or more 的面來檢查)

Cross 1 or more



Radial

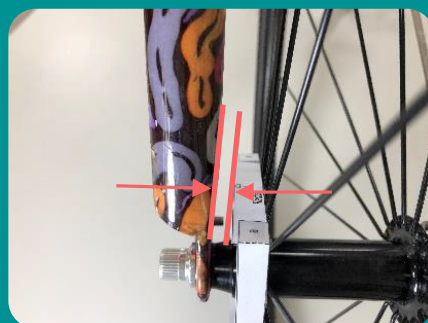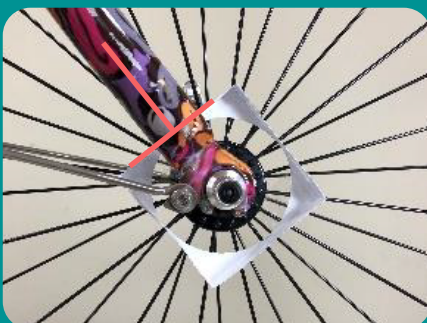

7. If the measuring tool doesn't touch the fork, you are ready to install the F12W-PRO!
如果檢查工具沒有觸碰到您的前叉，您將有足夠的空間安裝 F12W-PRO!